


### PROBLEM:

Placing and fixing the thin brick onto the mould surface using positioning aids like wooden strips, joint tapes or formliners.

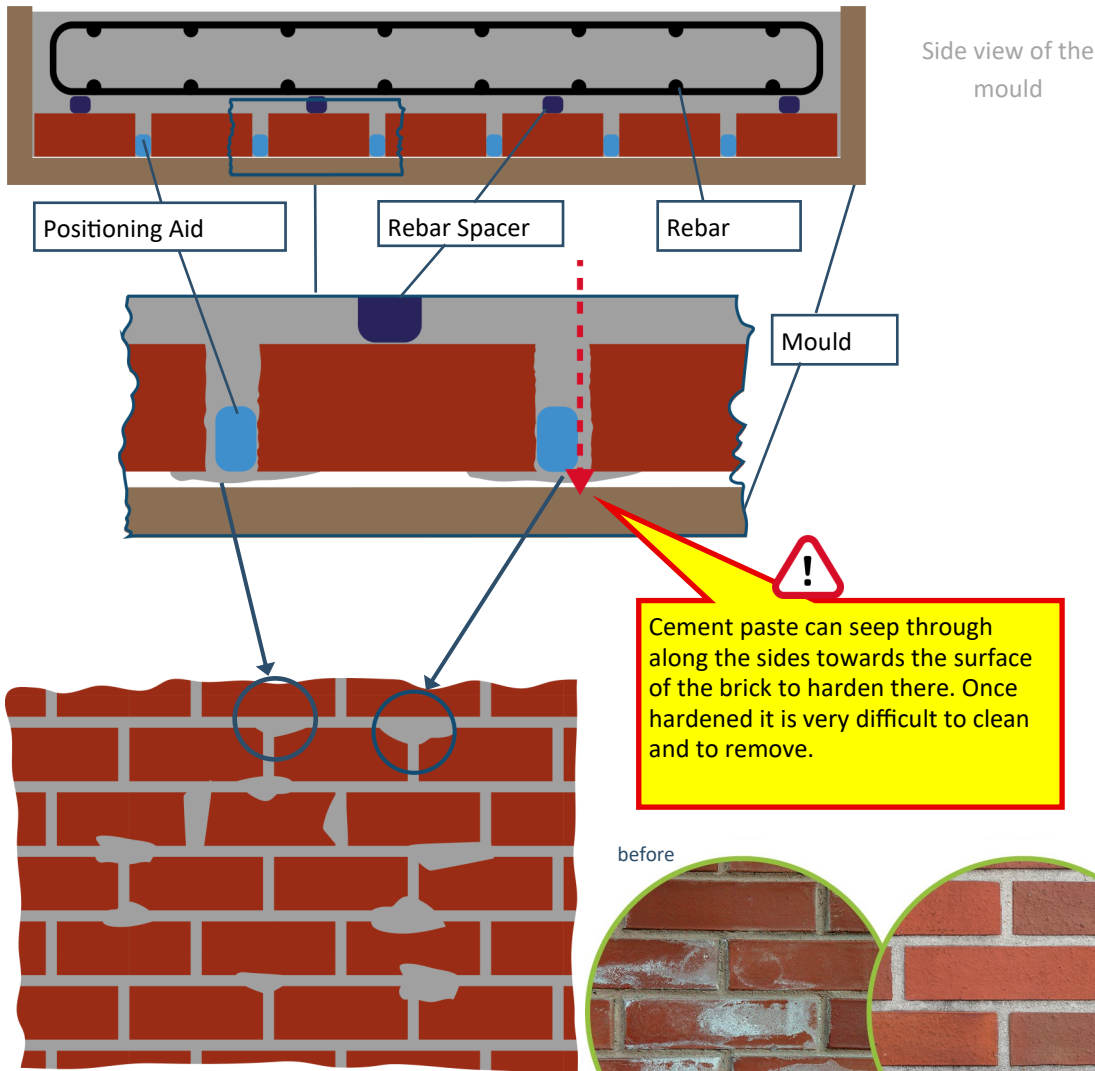

### SOLUTION:

Cover the mould surface with retarder paper as an intermediate layer first. Then place the thin brick onto the retarder paper.

